RayoBoard Installation Guide

For use Under Engineered Wood, Laminate and Carpet

62.5 x 80 cm Insulation Boards

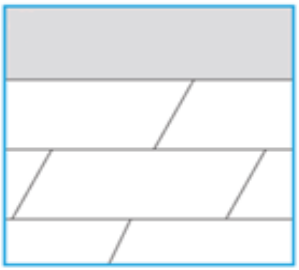


Image 1

RayoBoard is designed to be loose laid onto the subfloor in a brickwork pattern. (Image 1)

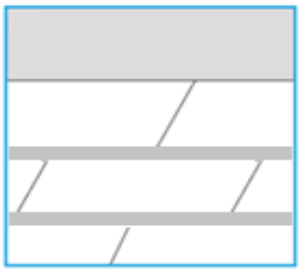


Image 2

When installing the RayoBoard boards it is advisable to tape the joins of each board together to ensure less movement. The tape is best laid along the horizontal lines first (Image 2) to ensure stability by allowing less movement across the floor, the vertical lines should then be taped afterwards (Image 3) for enhanced stability.



Image 3

Do not use spray adhesive with RayoBoard.

Rayotec Ltd, Unit 5 Trade City Sunbury, Brooklands Close, Sunbury on Thames, TW16 7FD

Tel: 01932784848 Email: info@rayotec.com